

Adjusting this Space

Tap a room to open Comfort Controls.

Toggle 3D/2D

Pick Floor

Toggle Single/Multi-Floor

Reset View

Tap to Close Panel

The interface is divided into two main sections. The left section shows a 3D/2D view of a building floor plan with two rooms highlighted: 'Office' (4.10 m²) and 'Storage' (8.40 m²). The right section, titled 'Office Comfort', displays various environmental and personal settings. At the top, there's a gear icon for 'Open Advanced Settings'. Below it, 'Air Temp' is 66°F, 'Radiant Temp' is 64°F, and 'Humidity' is 20%. A central figure of a person is labeled 'Default Persona' with 'Activity 1.2 met' and 'Clothing 0.8 clo'. 'Air Speed' is also shown. At the bottom, a 'Comfort Adjustment' slider is set to 0.8 clothing, with a graph above it showing comfort levels from Cold to Hot. A 'Reset View' icon and a 'Tap to Close Panel' icon are at the bottom left of the right section.

Office Comfort

Air Temp 66°F

Radiant Temp 64°F

Humidity 20%

Default Persona

Activity 1.2 met

Clothing 0.8 clo

Air Speed

Comfort Adjustment

I'm Cold | I'm Hot

0.8 clothing

Open Advanced Settings

Comfort Factors

These factors affect how you feel. The **persona** represents the occupants and shows their expected clothing and activity level.

Set the clothing level on the slider below. Activity level and adaptability are by the building manager. Other factors are measured by sensors or inferred.

Current Comfort

Shows the estimated comfort level at this time. The peak of the curve means maximum comfort. The system works to bring comfort back to the ideal level. White lines show the adaptability range set by the building manager.

Comfort Adjustment

Indicate what you usually wear in this space so the system can automatically adjust.

To cool or warm the room, move the slider.



Scan to watch a tutorial